

Connection diagram with IP-Encoder



IP-Encoder

The IP encoder is used to convert the HDMI signal from the camera systems into a network-compatible RTSP stream, which can then be streamed to a PC/laptop via a video player or network video recorder. The camera image is fed into your company network and can therefore be accessed from any location.

